


## RLQ-120-TP

Brand Name	MAGNETIC-NPF
Ballast Type	Magnetic
Starting Method	Trigger Start
Lamp Connection	Series
Input Voltage	120
Input Frequency	60 HZ
Status	Active

### Electrical Specifications

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	MAX THD %	Power Factor	Lamp Current Crest Factor	B.E.F .
* F13T8	1	13	20/-07	0.54	23	1.00	10	0.36	1.5	4.35
F14T12	1	14	50/10	0.58	28	0.92	10	0.40	1.5	3.29
F15T12	1	14.5	50/10	0.58	29	0.99	05	0.42	1.5	3.35
F15T8	1	15	50/10	0.56	28	1.01	05	0.41	1.4	3.60
F20T12	1	20	50/10	0.55	28	0.83	05	0.42	1.4	2.97

### Wiring Diagram

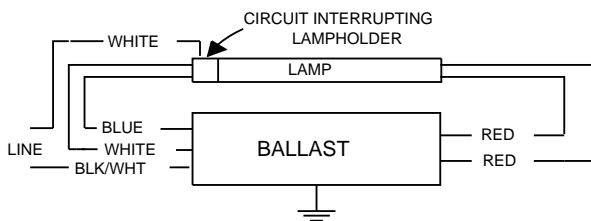


Diag. 16

The wiring diagram that appears above is for the lamp type denoted by the asterisk (\*)

### Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black			Yellow/Blue		
White	18		Blue/White		
Blue	18		Brown		
Red	12		Orange		
Yellow			Orange/Black		
Gray			Black/White	10	
Violet			Red/White		

### Enclosure

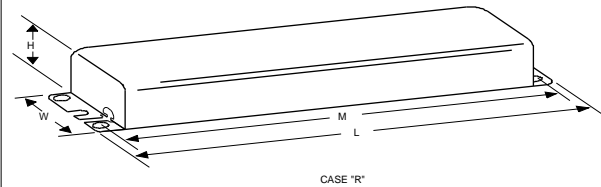

### Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
6.50 "	1.9375 "	1.375 "	6 "
6 1/2	1 15/16	1 3/8	6
16.5 cm	4.9 cm	3.5 cm	15.2 cm

Revised 02/27/1998



Data is based upon tests performed by Philips Lighting Electronics N.A. in a controlled environment and is representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

### PHILIPS LIGHTING ELECTRONICS N.A.

10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018

Tel: 800-322-2086 · Fax: 888-423-1882 · www.philips.com/advance

Customer Support/Technical Service: 800-372-3331 · OEM Support: 866-915-5886