


ASB-0620-24-BL-TP

Brand Name	SIGNPRO
Ballast Type	Magnetic Sign
Starting Method	Rapid Start
Lamp Connection	Series
Input Voltage	120
Input Frequency	60 HZ
Status	Active

Electrical Specifications

Lamp Type	Num. of Lamps	Lamp Footage	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	MAX THD %	Power Factor	Lamp Current Crest Factor	B.E. F.
* F36T12/HO	2	6	50	-20/-29	1.41	123	0.87	45	0.73	2.0	0.70
F60T12/HO	4	20	75	-20/-29	2.56	304	1.06	15	0.99	1.7	0.35
F72T12/HO	3	18	85	-20/-29	2.34	279	0.96	15	0.99	1.8	0.34

Wiring Diagram

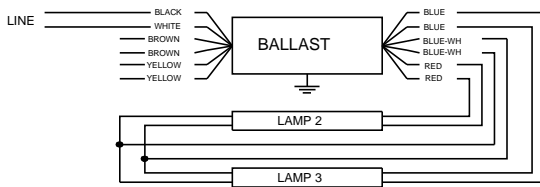

Note: Insulate unused leads individually as shown on ballast label


Diag. 5

The wiring diagram that appears above is for the lamp type denoted by the asterisk (*)

Standard Lead Length (inches)

	in.	cm.	in.	cm.
Black	24	61		
White	24	61		
Blue	75	190.5		
Red	46	116.8		
Yellow	75	190.5		
Gray		0		
Violet		0		
Yellow/Blue				0
Blue/White			46	116.8
Brown			46	116.8
Orange				0
Orange/Black				0
Black/White				0
Red/White				0

Enclosure

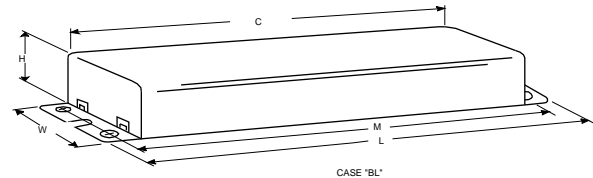

Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
11.75 "	3.1875 "	2.625 "	11.14062 "
11 3/4"	3 3/16"	2 5/8"	11 9/64"
29.8 cm	8.1 cm	6.7 cm	28.3 cm

Revised 03/08/2004



Data is based upon tests performed by Philips Lighting Electronics N.A. in a controlled environment and is representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

PHILIPS LIGHTING ELECTRONICS N.A.

10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018

Tel: 800-322-2086 · Fax: 888-423-1882 · www.philips.com/advance

Customer Support/Technical Service: 800-372-3331 · OEM Support: 866-915-5886